

Replacement Parts And Warranty Information

For customer service, warranty information or replacement parts, please call us at :

732-752-7220

or visit us online at :

www.evolurbaby.com

Dream On Me Inc.
1532 S Washington Ave Piscataway TWP NJ 08854
Tel: 732-752-7220
Fax: 732-752-7221

évolur
evolving with your baby

USER MANUAL

522 Vogue



PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED.

⚠ WARNING

Failure to follow these warnings and the assembly instructions increase the risk of serious injury or death.

PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED. NEVER LEAVE child unattended.

TO AVOID SERIOUS INJURY from falling or sliding out, **ALWAYS** use seat belt. **CHECK** to make sure seat belt is fastened securely by tightening the straps. **STRANGULATION HARZARD: NEVER** hang strings or toys from stroller.

TO PREVENT STROLLER FROM BEING IN AN UNSTABLE CONDITION, never place parcels or other items on the stroller handle or canopy. **DO NOT** place more than 11lbs (5.0kgs) in the storage basket.

NEVER USE STROLLER ON STAIRWAYS or escalators. The stroller is intended for a child who weighs up to 40lbs (18kgs) and up to 45 inches (114cm) in height. **TO AVOID STRESS AND TO PREVENT AN UNSTABLE CONDITION ON STROLLER**, never exceed the recommended limits. Never use with more than one child at a time. **STROLLER IS SUITABLE for children from birth to 36 months. STROLLER IS NOT INTENDED** for use while jogging, rollerblading, skating, or similar activity.

DO NOT lift the stroller with child inside.

AVOID FINGERS FROM GETTING CAUGHT IN STROLLER: Use care when opening and closing the stroller. **ALWAYS** check to make sure stroller is completely latched open before using it.

⚠ WARNING

Failure to follow these warnings and the assembly instructions increase the risk of serious injury or death.

PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED.

DO NOT use storage basket to carry a child.

NEVER LET A CHILD stand on any part of the stroller. Child could fall and be injured.

Care & Maintenance

Regular care and maintenance help contribute to the safety and longevity of your product.

Environmental influences and outdoor storage could cause corrosion. Therefore, always store your stroller indoors. Do not keep the stroller in a damp, cold, or hot place.

We recommend regular maintenance of the frame and fabrics. Should the frame and fabrics become soiled, use a damp cloth and mild detergent to wipe away the dirt. Do not use abrasives or solvents.

Ensure that all locking devices are correctly engaged before use.

Never force any folding or adjustable parts.

Regularly check the unit to ensure that no parts are loose or broken.

PARTS LIST:

Please check that you have all the parts shown before assembling product.

If are missing any parts, please contact Customer Service at 732 752 7220



Frame with 2 front wheels and canopy



front bumper



Back wheels*2

ASSEMBLY-SETTING UP FRAME:



Place flattened carton down on floor to protect surface and before assembling stroller.

Pull the handle bar as shown.



Lift the stroller up by the handlebar until you hear a "CLICK" sound. See fig. 2.



CHECK TO MAKE sure you hear a "CLICK" and the joint is locked into correct place before the using.

FUNCTIONS- FOOT REST :



Pull the button underneath the footrest (as shown) to adjust it in a downward position.



Lift the footrest upwards (as shown) to adjust it in a horizontal position.

FUNCTIONS- HOW TO REMOVE BACK WHEEL :



Press the red button to take out back wheel as shown.

FUNCTIONS- HOW TO REMOVE BUMPER



Press the button in center of bumper holder to take it out as shown

FUNCTIONS- HOW TO USE THE BRAKE



Step down outside pedal to stop as shown.




Step down inside pedal to go as shown.

FUNCTIONS- HOW TO FOLD



Close the canopy as shown.

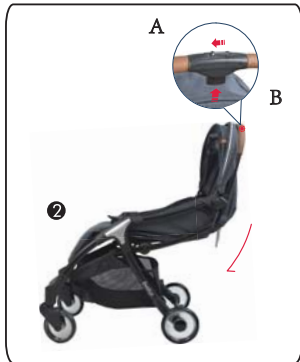

Slide the button A to left, at the same time press button B up, push handle bar downward to fold as shown.



Folded as shown

FUNCTIONS- SAFETY HARNESS



To attach the harness click them into the crotch buckle socket.



To unlock harness, push the button on the crotch buckle.



To adjust harness around your child, loosen straps as shown.