

Owner's Manual



Scan the QR code to register your product https://www.evolurbaby.com/customer-care/product-registration/

Read all instructions before assembling and using product. **IMPORTANT** - Keep Instructions for future use.





WARNINGS

AWARNING

Failure to follow these warnings and the instructions could result in serious injury or death.

PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFETY OF YOUR CHILD.

AWARNING

FALL HAZARD: Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.

- Always use restraints. Adjust to fit snuggly.
- Tray is not designed to hold child in chair.
- Stay near and watch child during use.
- Prevent serious injury or death from falls or sliding out! Ensure that the harness is fitted correctly and that the child is secure in the harness.
- The highchair is suitable for children 6 months to 36 months while using it in highchair position. Highchair is not suitable for children under 6 months. While using this product in the Junior Chair position, it is suitable for children from 24-60 months.
- Do not use if any part is broken, torn or missing.
- Discontinue use of this highchair when child weighs more than 33 lbs.

• Do not use the highchair unless all components are correctly fitted and correctly adjusted.

• Do not leave your child unattended, even for the shortest time.

• Avoid placing the chair near naked heat sources such as electric bar fires, gas fires, etc, or where a child could gain access to any other kind of the hazard.

• Ensure that all users are familiar with the product's operation. It should always assemble and operate easy. If it does not, do not force the mechanism. Rather, stop and read the instructions.

WARNINGS (cont.)

AWARNING

- Highchair is recommended to be used on flat stable surfaces.
- Please ensure that your Evolur Highchair is fully assembled before using the product.
- Do not move, recline, or adjust the height of this product with child in it.
- Never leave child unattended. Always keep your child in view.

• STRANGULATION HAZARD Do not place product in any location where there are cords, such as window blind cords, drapes, phone cords, etc.

• FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY as this product is intended to be assembled once. If you experience any difficulties, please contact the Customer Service Department.

• All additional hazards such as electrical flexes should be kept out of reach of your child when in the highchair.

• Assemble the chair once only, it is not intended to be taken apart and it is reassembled.

• PREVENT SERIOUS INJURY OR DEATH FROM SLIDING OUT, FALLS, OR TIPPING OVER. Always use seat belt. Secure your child at all times with the restraint system provided, either in the reclining or upright position. The tray is not designed to hold your child in the product. It is recommended that the product be used in the upright position only by children capable of sitting upright unassisted.

• The child should be secured in the highchair at all times using the restraining system.

• It is recommended that the highchair be used only by children capable of sitting upright unassisted.

• THIS PRODUCT IS DESIGNED AS A highchair for use with child up to 3 years of age or as an infant feeding booster seat for use with a child up to 6 years of age and up to 60 lbs (27.3kg)

• ALWAYS USE booster straps to attach the infant/toddler feeding booster seat to any chair. Always ensure straps are pulled tight.

• THIS INFANT/TODDLER FEEDING BOOSTER SEAT is designed to be used by a child up to 6.

Thank You !

... for choosing **Evolur** and congratulations on joining our family; a family that has been transforming lives for 30 years!

We appreciate your feedback and wish you the very best in the coming years with your new addition. If you have any questions or concerns, please don't hesitate to reach out to us. One of our trusted Customer Care representatives will be happy to assist you.

Thank you again for entrusting us to supply you with safe, and affordable baby products and accessories.

Gracias !

... por elegir **Evolur** y felicidades por unirnos a nuestra familia; una familia que lleva 30 años transformando vidas!

Agradecemos sus comentarios y le deseamos lo mejor en los próximos años con su nueva incorporación. Si tiene alguna pregunta o inquietud, no dude en ponerse en contacto con nosotros. Uno de nuestros representantes de atención al cliente de confianza estará encantado de ayudarle.

Gracias de nuevo por confiar en nosotros para suministrarle productos y accesorios para bebés seguros y asequibles.



PARTS

If there are any missing parts, please contact Evolur before using the product.



www.evolurbaby.com/help

HARDWARE

If there are any missing parts, please contact Evolur before using the product.



BOOSTER SEAT ASSEMBLY - SEAT RAIL ASSEMBLY

1

1a. Slide the Seat Rail (E) into the slot present at the center of the Seat (A) as shown in the figure.
1b. Ensure to slide both the sides of the Seat Rail (E) into the slots present on the seat sides (A) until a 'Click' is heard.
1c. Use the Screw (R) on each side and tighten it up with a screwdriver to affix the seat rail to the seat.



www.evolurbaby.com/help

0

BOOSTER SEAT ASSEMBLY - HARNESS ASSEMBLY

2

2a. Take the 5-point harness (G), Slide the Shoulder strap onto the top of the waist strap latch. - Repeat for the other side.

2b. Insert the shoulder/waist strap latch assembly into the buckle - Push until you hear a "Click".

2c. Repeat for the other side.

2d. To adjust the shoulder and waist straps slide the strap adjusters as shown.

2e. Press the center buckle to release harness.

2f. Pull the webbing through the slot in the Seat and the Cushion.

2g. Repeat in reverse order to remove the harness from the seat - Make sure the straps are in the correct orientation and not twisted.



(G)

www.evolurbaby.com/help

2f



3

3a. Place the Seat (A) and Seat Base (H) on each other, make sure they are rightly aligned.
3b. Place one of the Washer (L) above the center insertion, insert the Screw (Q) into the center insertion after placing the Washer (L).
3c. Take the other Washer (L) and place it at the center insertion of the Seat Base (H) from below as depicted in the diagram.
3d. Now, hold the Screw (Q), Washers (L), Seat

(A), and Seat Base (H) together. Insert the Barrel Nut (M) from below the Seat base (H). 3e. Rotate and tighten the Barrel Nut (M) with the help of Allen Key (P) provided. Ensure that it is tight and firm.

3f. Place the Hardware Cover (K) on the Screw (Q) to cover the same.

3g. Place the Cushion (B) on the seat.





www.evolurbaby.com/help

CHAIR ON THE CHAIR MODE ASSEMBLY

1

1a. Pull the Safety Belt (I) into the slots provided on the seat back as shown in the figure.

1b. Make sure the belts are fully inserted (as in the diagram) both on the top and bottom of the seat. Check the buckle. Also, ensure that the straps are not twisted

1c. Place the Seat (A) on an adult chair, take the buckles of the Safety Belt (I) inserted at the back of the Seat (A) around the back of an adult chair, and push until you hear a click. Similarly, take the buckles of Safety belt (I) inserted below the Seat (A) around the base of the adult chair, and push until you hear a 'Click'.

1d. Adjust the length of the Safety belt (I) as per the adult chair to ensure it is firm.







HIGH CHAIR ASSEMBLY - LEGS ASSEMBLY

(1a)

1b

1a. Insert the Wooden Legs (F) inside the Seat Base (H) as shown in the figure.

1b. Use the Screw (O) to attach the wooden legs to Seat Base (H). Tighten the Screw (O) with the Allen Key (P).

1c. Similarly, follow the same for all the wooden legs.

1d. Check the legs or the chair foot is tight and firm and not wobbling when placed on the floor.



www.evolurbaby.com/help

www.evolurbaby.com/help

(F)

HIGH CHAIR ASSEMBLY - FOOTREST ASSEMBLY

2

2a. Place the Foot Rest (D) in the center of the wooden legs installed above. Place in such a way that the slots provided on the footrest are aligned to the slots present on the wooden legs. Refer to the diagram given.

2b. Use the Screw (O) to attach both. Tighten the Screw (O) with the Allen Key (P).

2c. Do the same onto the other legs.

2d. Make sure the Footrest (D) is firm and not loose.



HIGH CHAIR ASSEMBLY - TRAY ASSEMBLY



3a. Position the Tray (C) and ensure it aligns to the Seat
(A) as shown in the diagram.
3b. Press the button on the Sides of the seat to push the Tray (C) into the seat slots.
3c. Push the Tray (C) until the button is released as shown in the picture to make sure it is rightly attached.





HIGH CHAIR ASSEMBLY - 360° SEAT ROTATION





4a. 360-degree Swivel: Pull the Barrel Nut (M) below the Seat Base (H) to rotate the seat and use it in 4 different positions.



HIGH CHAIR ASSEMBLY - SAFETY

5

5a. Make sure the Child is made to sit on the High Chair from the backside as shown below and not from the side of the High Chair to which Tray is attached.



5b. DO NOT leave the child unattended and make sure the child is secured with the harness (restrain) provided for safety at all the times.



5b

www.evolurbaby.com/help

BAR SEAT ASSEMBLY

1

1a. Fix the Wooden legs (F) to the Seat base (H) using the screws (O) and Allen Key (P), as described in the procedure under High Chair Assembly- Legs Assembly previously.

1b. Similarly, fix the Foot Rest (D) to the already assembled legs (F) using the screws (O) and Allen Key (P). (In the same way, as mentioned under High Chair Assembly- Foot Rest Assembly previously)

1c. Now, place the Bar Seat (J) on the Seat base (H), insert the Screws (N) provided into each slot as shown in the diagram, and tighten the screws using Allen Key (P).

1d. Make sure the Bar Seat (J) attached is affixed tight.







MODES



CARE AND MAINTENANCE

Occasionally check your product for loose bolts, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Evolur replacement parts. Do not attempt to refinish or repair any of the wooden parts.

• Keep this product in a cool dry place. If this product happens to get wet, wipe with a dry cloth and allow to air-dry completely.

• Excessive exposure to direct sunlight or heat could cause fading of fabric and wood finishes and/or warping of parts.

• To clean this product, wipe clean with a damp cloth using only household soap and cool water. DO NOT BLEACH.

• Seat Pad and Harness can be removed from the Seat and washed by hand in cold water, or machine washed on a gentle cycle

YOU DID IT...!

It's time to make a happy meal time for your little one in this sturdy, multi-tasking and stylish high chair...!



1532 S. WASHINGTON AVENUE PISCATAWAY, NJ 08854 E-mail: info@evolurbaby.com

www.evolurbaby.com

Follow Us On



slumbe

@evolurbaby

to get your nursery featured on our social media.

Enter our monthly giveaway! Scan the QR code to register. Chat with us! Scan the QR code to Live Chat.









sweetpea baby

