

## Replacement Parts And Warranty Information

For customer service, warranty information or replacement parts, please call us at :

or visit us online at :

[www.evolurbaby.com](http://www.evolurbaby.com)

Dream On Me Inc.  
1532 S Washington Ave Piscataway TWP NJ 08854  
Email: [info@evolurbaby.com](mailto:info@evolurbaby.com)  
[www.evolurbaby.com](http://www.evolurbaby.com)

évolur  
evolving with your baby

## USER MANUAL

# 522 Vogue



Scan the QR code to register your product  
<https://www.evolurbaby.com/customer-care/product-registration/>



PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED.

## **⚠ WARNING**

Failure to follow these warnings and the assembly instructions increase the risk of serious injury or death.

**PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED. NEVER LEAVE** child unattended.

**TO AVOID SERIOUS INJURY** from falling or sliding out, **ALWAYS** use seat belt. **CHECK** to make sure seat belt is fastened securely by tightening the straps. **STRANGULATION HARZARD: NEVER** hang strings or toys from stroller.

**TO PREVENT STROLLER FROM BEING IN AN UNSTABLE CONDITION**, never place parcels or other items on the stroller handle or canopy. **DO NOT** place more than 11lbs (5.0kgs) in the storage basket.

**NEVER USE STROLLER ON STAIRWAYS** or escalators. The stroller is intended for a child who weighs up to 40lbs (18kgs) and up to 45 inches (114cm) in height. **TO AVOID STRESS AND TO PREVENT AN UNSTABLE CONDITION ON STROLLER**, never exceed the recommended limits. Never use with more than one child at a time. **STROLLER IS SUITABLE for children from birth to 36 months. STROLLER IS NOT INTENDED** for use while jogging, rollerblading, skating, or similar activity.

**DO NOT** lift the stroller with child inside.

**AVOID FINGERS FROM GETTING CAUGHT IN STROLLER:** Use care when opening and closing the stroller.

**ALWAYS** check to make sure stroller is completely latched open before using it.

P1

## **⚠ WARNING**

Failure to follow these warnings and the assembly instructions increase the risk of serious injury or death.

**PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED.**

**DO NOT** use storage basket to carry a child.

**NEVER LET A CHILD** stand on any part of the stroller. Child could fall and be injured.

## **Care & Maintenance**

Regular care and maintenance help contribute to the safety and longevity of your product.

Environmental influences and outdoor storage could cause corrosion. Therefore, always store your stroller indoors. Do not keep the stroller in a damp, cold, or hot place.

We recommend regular maintenance of the frame and fabrics. Should the frame and fabrics become soiled, use a damp cloth and mild detergent to wipe away the dirt. Do not use abrasives or solvents.

Ensure that all locking devices are correctly engaged before use.

Never force any folding or adjustable parts.

Regularly check the unit to ensure that no parts are loose or broken.

P2

## PARTS LIST:

Please check that you have all the parts shown before assembling product.

If are missing any parts, please contact Customer Service at 732 752 7220



**Frame with 2 front wheels and canopy**



**front bumper**



**Back wheels\*2**

## ASSEMBLY-SETTING UP FRAME:



1

Place flattened carton down on floor to protect surface and before assembling stroller.

Pull the handle bar as shown.



2

Lift the stroller up by the handlebar until you hear a "CLICK" sound. See fig. 2.



3

**CHECK TO MAKE** sure you hear a "CLICK" and the joint is locked into correct place before the using.

### ASSEMBLY- REAR WHEELS:



Install rear wheels as shown until you hear a "click" sound to indicate the wheel is installed in right position.

### ASSEMBLY- FRONT BUMPER:



Attach the bumper on the frame until you hear a "CLICK" sound. See fig. beside the text.

### ASSEMBLY- OPEN CANOPY:



Open the canopy as shown.  
Congratulations!  
You have assembled the stroller!

### FUNCTIONS- HOW TO ADJUST THE BACKREST



Press the button to adjust the backrest to be up for sitting as shown



Press the button to adjust the backrest to be down for sleeping as shown

### FUNCTIONS- CANOPY



Open or close the canopy as shown.

### FUNCTIONS- FOOT REST :



Pull the button underneath the footrest (as shown) to adjust it in a downward position.



Lift the footrest upwards (as shown) to adjust it in a horizontal position.

### FUNCTIONS- HOW TO REMOVE BACK WHEEL :



Press the red button to take out back wheel as shown.

### FUNCTIONS- HOW TO REMOVE BUMPER



Press the button in center of bumper holder to take it out as shown

### FUNCTIONS- HOW TO USE THE BRAKE



Step down outside pedal to stop as shown.




Step down inside pedal to go as shown.

## FUNCTIONS- HOW TO FOLD



Close the canopy as shown.

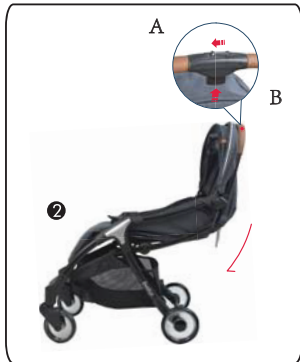

Slide the button A to left, at the same time press button B up, push handle bar downward to fold as shown.



Folded as shown

## FUNCTIONS- SAFETY HARNESS



To attach the harness click them into the crotch buckle socket.



To unlock harness, push the button on the crotch buckle.



To adjust harness around your child, loosen straps as shown.



1532, S. Washington Avenue  
Piscataway, NJ 08854  
E-mail: [info@evolurbaby.com](mailto:info@evolurbaby.com)

[www.evolurbaby.com](http://www.evolurbaby.com)

Follow us on



to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.

