

Replacement Parts And Warranty Information

For customer service, warranty information or replacement parts, please call us at :

or visit us online at :

www.evolurbaby.com

Dream On Me Inc.
1532 S Washington Ave Piscataway TWP NJ 08854
Email: info@evolurbaby.com
www.evolurbaby.com

évolur
evolving with your baby

USER MANUAL

524 Nova 3-in-1 Stroller



Scan the QR code to register your product
<https://www.evolurbaby.com/customer-care/product-registration/>



PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED.

 
SAFETY HARNESS:



Slide the harness into the crotch buckle socket to attach it. You will hear a click when it is successfully attached.



To unlock the harness, push the button on the crotch buckle.

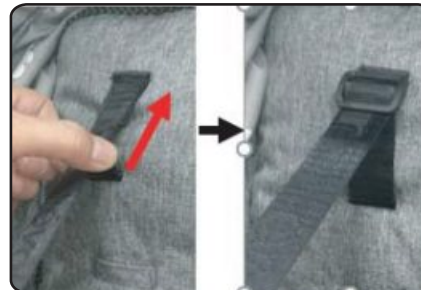

Push the plastic ring up and move it to a taller anchor point of the shoulder belt, suitable for taller kids.



To adjust harness around your child, loosen straps as shown.

FUNCTIONS-CANOPY



Push to close or open the canopy as shown.



Unzip canopy cover and press the release button (as shown) to remove the canopy (if required).



The sun visor can be extended and retracted as shown.

! WARNING

Failure to follow these warnings and the assembly instructions increase the risk of serious injury or death.

PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED. NEVER LEAVE child unattended.

AVOID SERIOUS INJURY from falling or sliding out. Always use seat belt. **CHECK** to make sure seat belt is fastened securely by tightening the straps.

STRANGULATION HARZARD: NEVER hang strings or toys from stroller.

TO PREVENT STROLLER FROM BEING IN AN UNSTABLE CONDITION, never place parcels or other items on the stroller handle or canopy. **DO NOT** place more than 11lbs (5.0kgs) in the storage basket.

NEVER USE STROLLER ON STAIRWAYS or escalators **TO AVOID STRESS AND TO PREVENT AN UNSTABLE CONDITION ON STROLLER**. Stroller is intended for a child who weighs up to 40lbs (18kgs) and up to 45 inches (114cm) in height. Never use with more than one child at a time. **STROLLER IS SUITABLE for children from birth to 36 months. STROLLER IS NOT INTENDED** for use while jogging, rollerblading, skating, or similar activity.

DO NOT lift the stroller with child inside.

AVOID FINGERS FROM GETTING CAUGHT IN STROLLER: Use care when opening and closing the stroller.

ALWAYS check to make sure stroller is completely latched open before using it.

⚠ WARNING

Failure to follow these warnings and the assembly instructions increase the risk of serious injury or death.

PLEASE FOLLOW ALL INSTRUCTIONS AND KEEP USER GUIDE FOR FUTURE USE. ADULT ASSEMBLY REQUIRED.

DO NOT use storage basket to carry a child.

NEVER LET A CHILD stand on any part of the stroller. Child could fall and be injured.

Care & Maintenance

Regular care and maintenance help contribute to the safety and longevity of your product.

Environmental influences and outdoor storage could cause corrosion. Therefore, always store your stroller indoors. Do not keep the stroller in a damp, cold, or hot place.

We recommend regular maintenance of the frame and fabrics. Should the frame and fabrics become soiled, use a damp cloth and mild detergent to wipe away the dirt. Do not use abrasives or solvents.

Ensure that all locking devices are correctly engaged before use.

Never force any folding of adjustable parts.

 
Regularly check the unit to ensure that no parts are loose or broken.

FUNCTIONS- HOW TO REMOVE THE BUMPER



Press the buttons on both sides to remove the bumper.

FUNCTIONS- FRONT AND REAR WHEEL

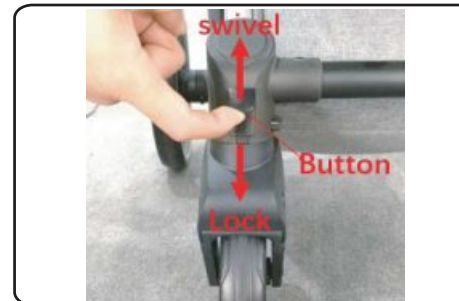

Pushing the button upwards allows the wheel to swivel 360 degrees. Pushing the button downwards locks the direction and the wheel.



Press the release button to pull out the front wheel.



Press the release button to pull out the rear wheel

FUNCTIONS- HOW TO OPEN



Press the button to separate front leg and rear leg.



Unlock the folding hook with one hand. Press the button to pull the handlebar up to the highest position.

 


Open the canopy as shown.

PARTS LIST:

Please check that you have all the parts shown before assembling product.


If the stroller is missing any parts, please contact Customer Service at 732 752 7220.

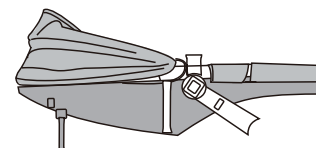


Seat body with canopy



 
front bumper

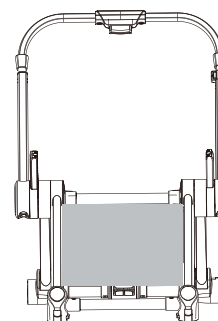

Frame

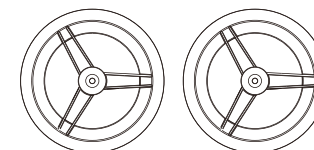 

Back wheel*2

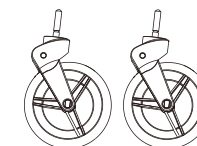 

Front wheel*2

ASSEMBLY-SETTING UP FRAME:

 


Place flattened carton down on floor to protect surface and before assembling stroller.

Press the button to open the front and rear legs as shown.



Unlock the folding hook with one hand, keep pressing the button located in middle of handle and pull the handle bar up to open the frame completely.

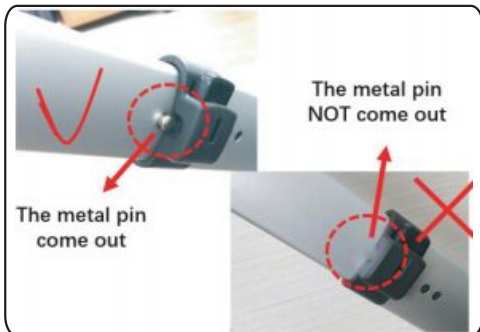


CHECK TO MAKE sure the metal pin comes out before using.

DO NOT use the stroller if the metal pin does not come out.

FUNCTIONS- HOW TO FOLD



 Close the canopy as shown.

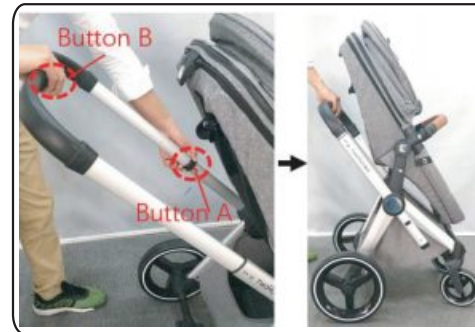

Keep pressing button A with one hand and keep pressing button B with another hand to push the handlebar to the lowest position, as shown.



Step on the rear connecting tube and push the handle towards the seat and canopy until you hear a "click".

FUNCTIONS- HANDLE ADJUSTING

 


Keep pressing the button shown to move the handlebar upwards or downwards to adjust its height. You have the option of choosing from 3 different positions.

FUNCTIONS- HOW TO FOLD




Close the canopy as shown.

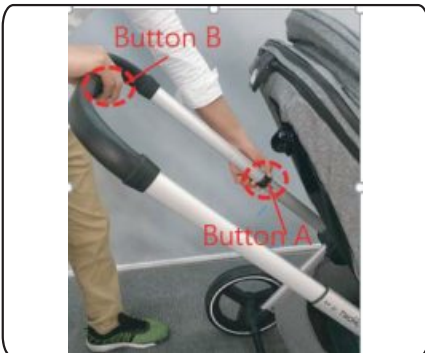


Keep pressing button A by one hand, keep pressing button B and push handle bar to be bottom position as shown.

 ASSEMBLY-INSTALL FRONT AND REAR WHEELS:

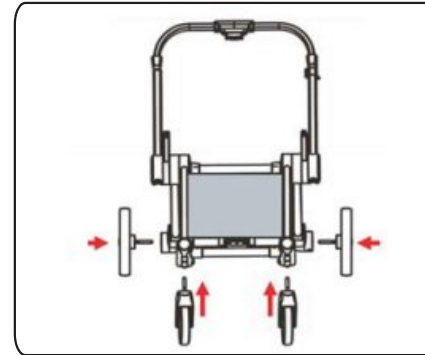


Install front and rear wheels as shown, until you hear a "click" sound to indicate that the wheel is installed in the right position.

 INSTALLING SEAT:

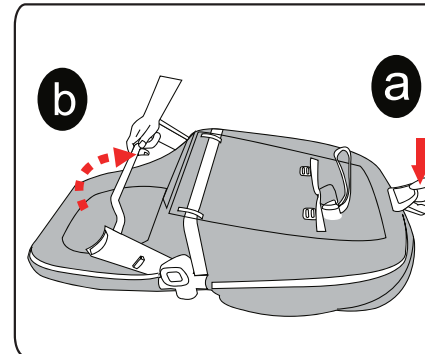


 Pull the seat top adjusting button (Fig. A) and swivel the connecting bar to be in an upright position (Fig. B) at the same time.

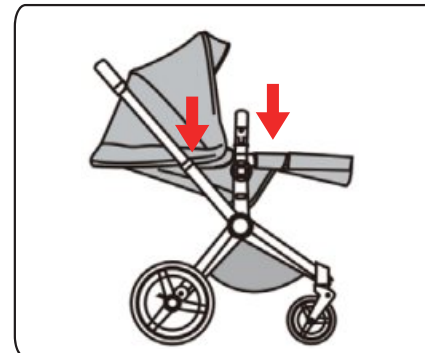

Install the seat on the frame (as shown) until you hear a "click" sound.

 FUNCTIONS- REVERSIBLE SEAT:

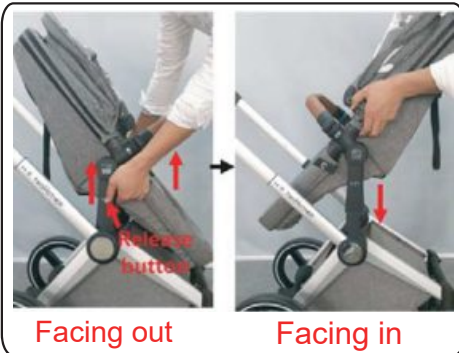

Press the release button on both sides to take down the seat and install facing in, as shown.

FUNCTIONS - HOW TO CONVERT IT TO A BASSINET:



Press the buckle and move it to the end of the webbing in order to flatten it down.



Press the top lever to adjust the recline to be in a horizontal position (as shown)

FUNCTIONS - HOW TO CONVERT IT TO A BASSINET MODEL:



Unlock the ring hook at both sides as shown.



Release the flap-buttons as shown, and push the bottom downwards.



Finished bassinet model for sleeping as shown.



1532, S. Washington Avenue
Piscataway, NJ 08854
E-mail: info@evolurbaby.com

www.evolurbaby.com

Follow us on



@EvolurBaby



@evolurbaby

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.

